



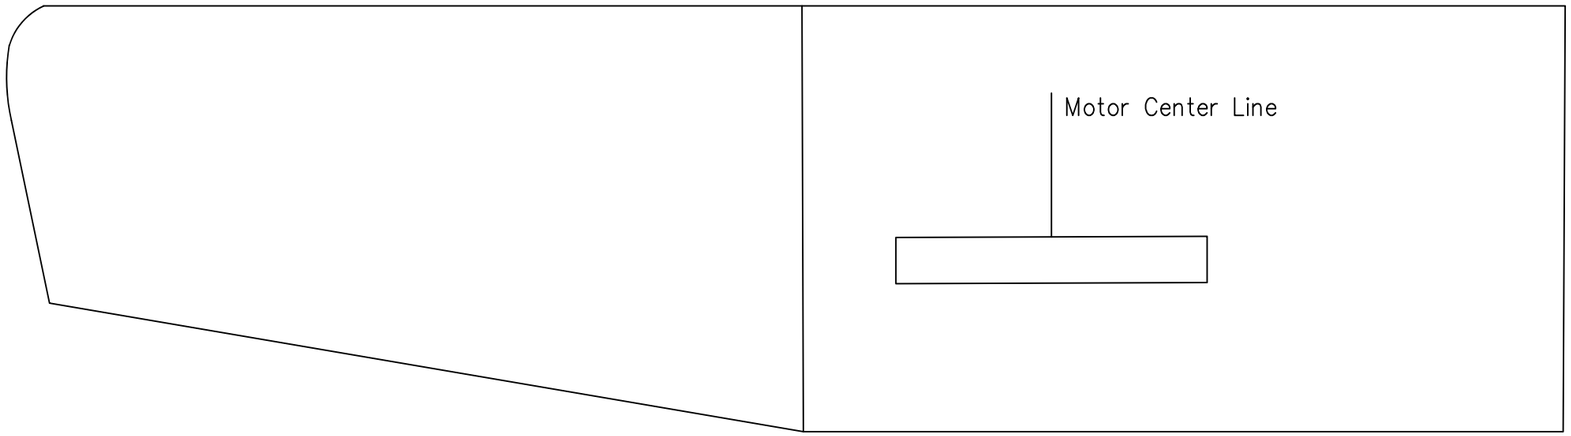


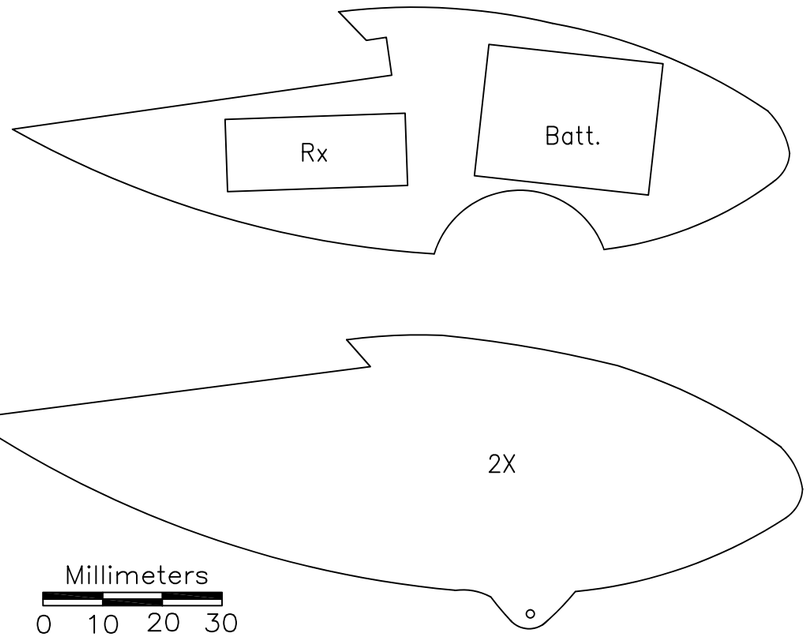



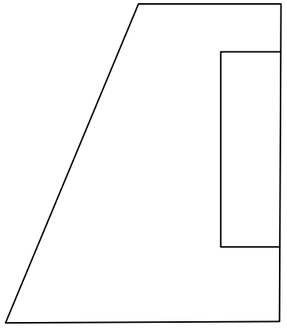

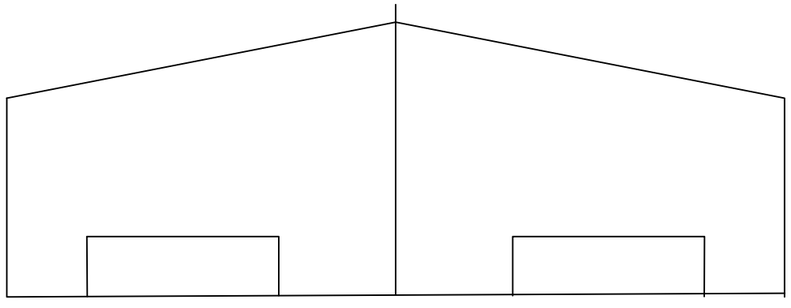

NOTES:

1. 3mm DEPRON USED FOR FUSELAGE AND WING. 2mm FOR TAIL.
2. CENTERLINE SHOWN ON TAIL FOR REFERENCE ONLY.
3. CENTER LINE FOR MOTOR MOUNT POSITION DEPICTED ON WING TEMPLATE. MOTOR MOUNTS SHOULD BE LOCATED ON UNDERSIDE OF WINGS
4. Rx AND BATTERY ARE MOUNTED ON FUSELAGE AS DEPICTED.
5. CUSTOM PLOT SCALE 1 INCH = 25.4mm.
6. RAISE EACH WING TIP APPROX 1 INCH BEFORE GLUING FOR DIEHEDRAL
7. 13 INCH 1/8x1/4 BALSA BOOM
8. CUT RECESSES IN FUSELAGE SIDES AS NEEDED FOR Rx AND WIRES.
9. REDRAWN FOR MICROTEX WITH PERMISSION.

DRAWING REVISION	
A1	—

SIZE
B

AA Glider

AA DESIGN

SHEET 1 OF 1

AEROACE MODS THREAD

COMPUTER GENERATED DRAWING