
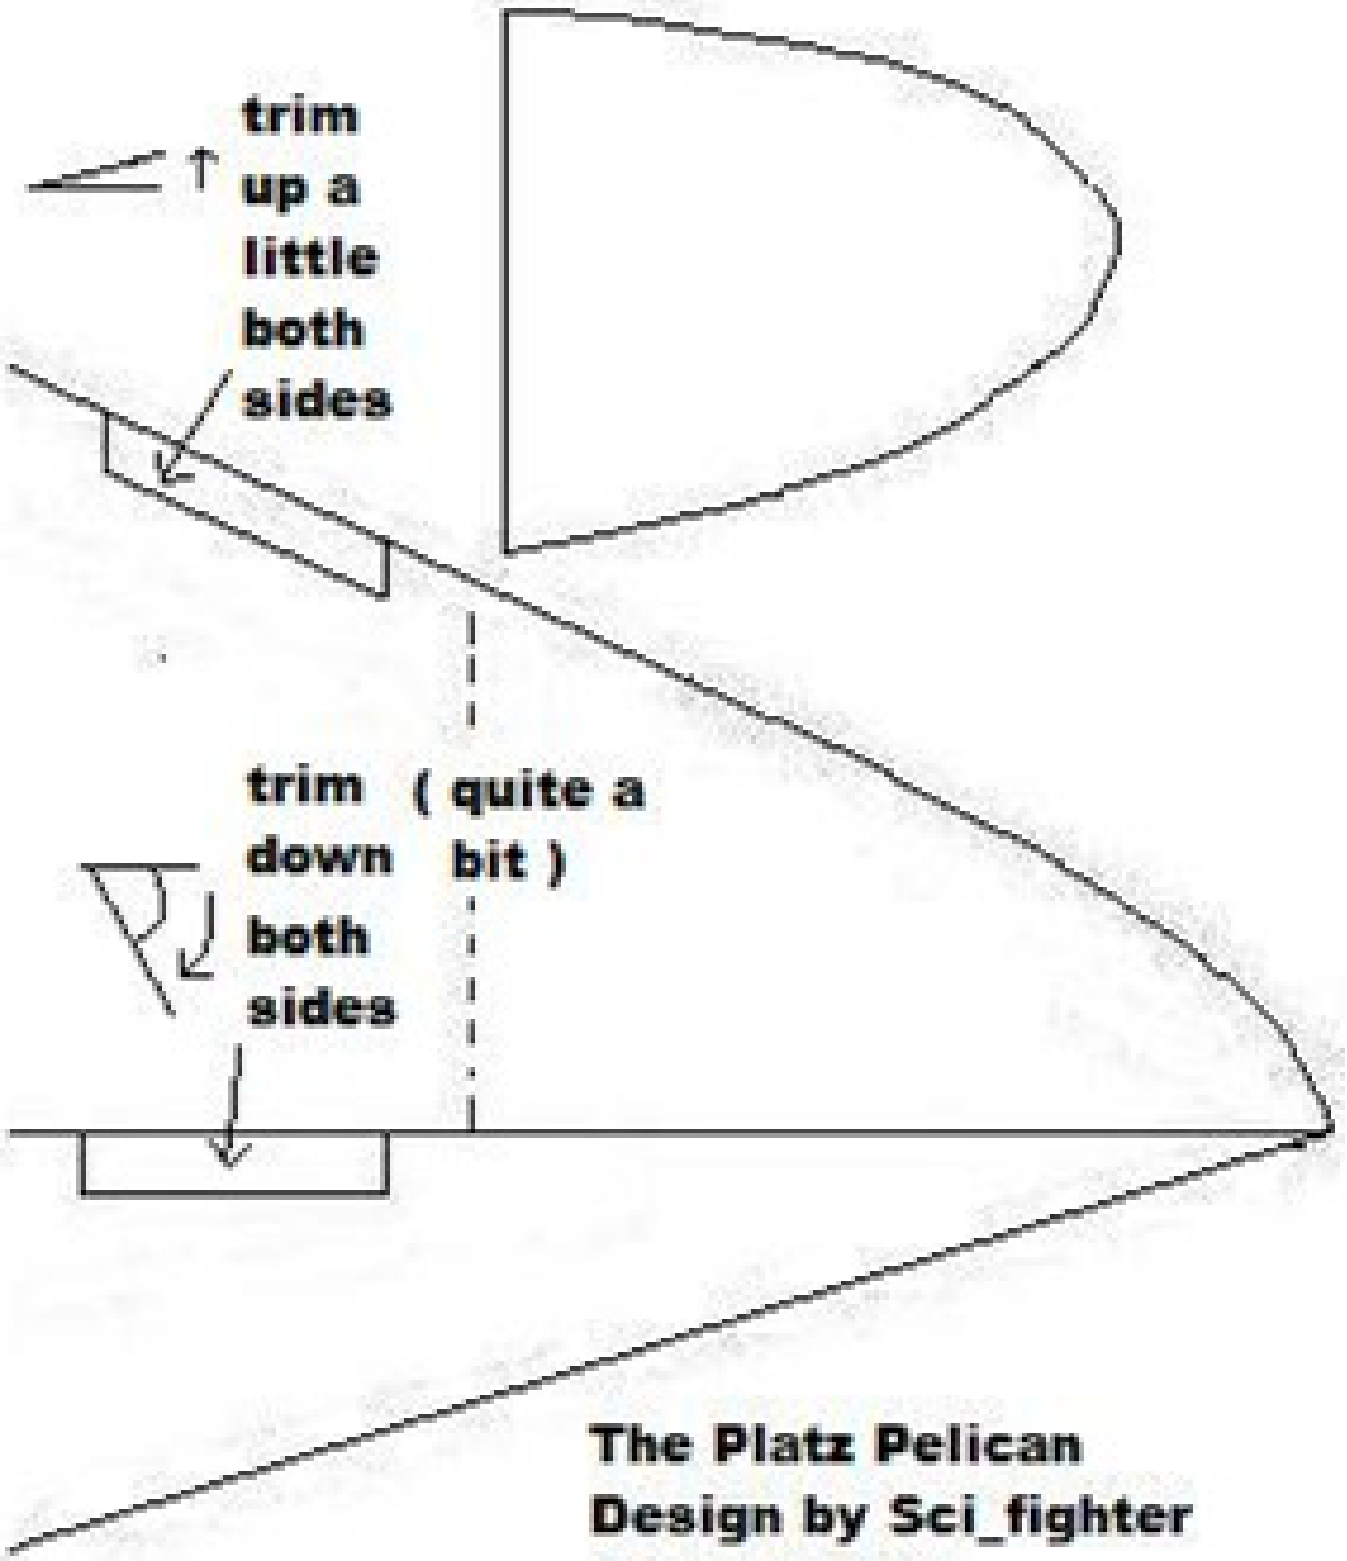



The Platz Pelican
Design by Sci_fighter
7th Jul 2009
Not for commercial use
@All Rights Reserved

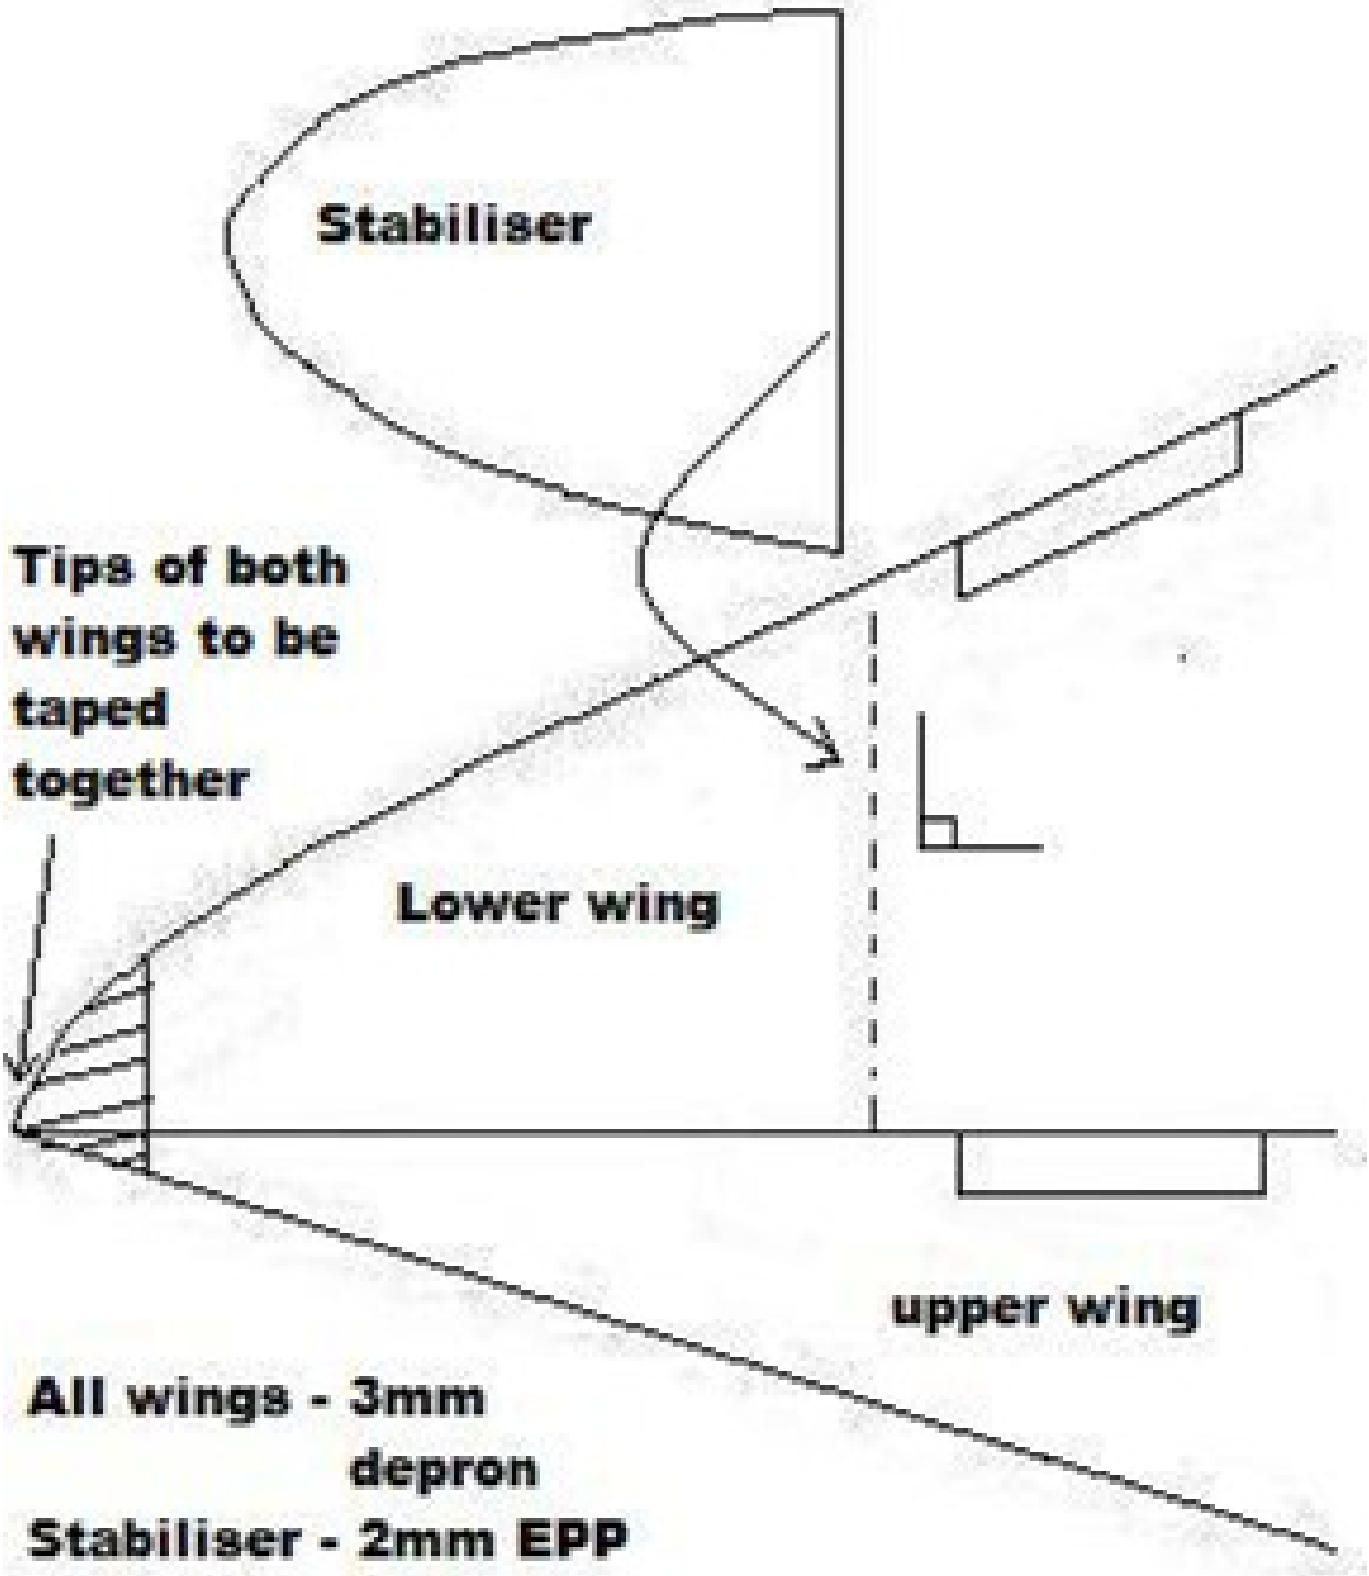

All wings - 3mm depron

Stabiliser - 2mm EPP or depron

Fuselage - 9mm EPP or 6mm depron

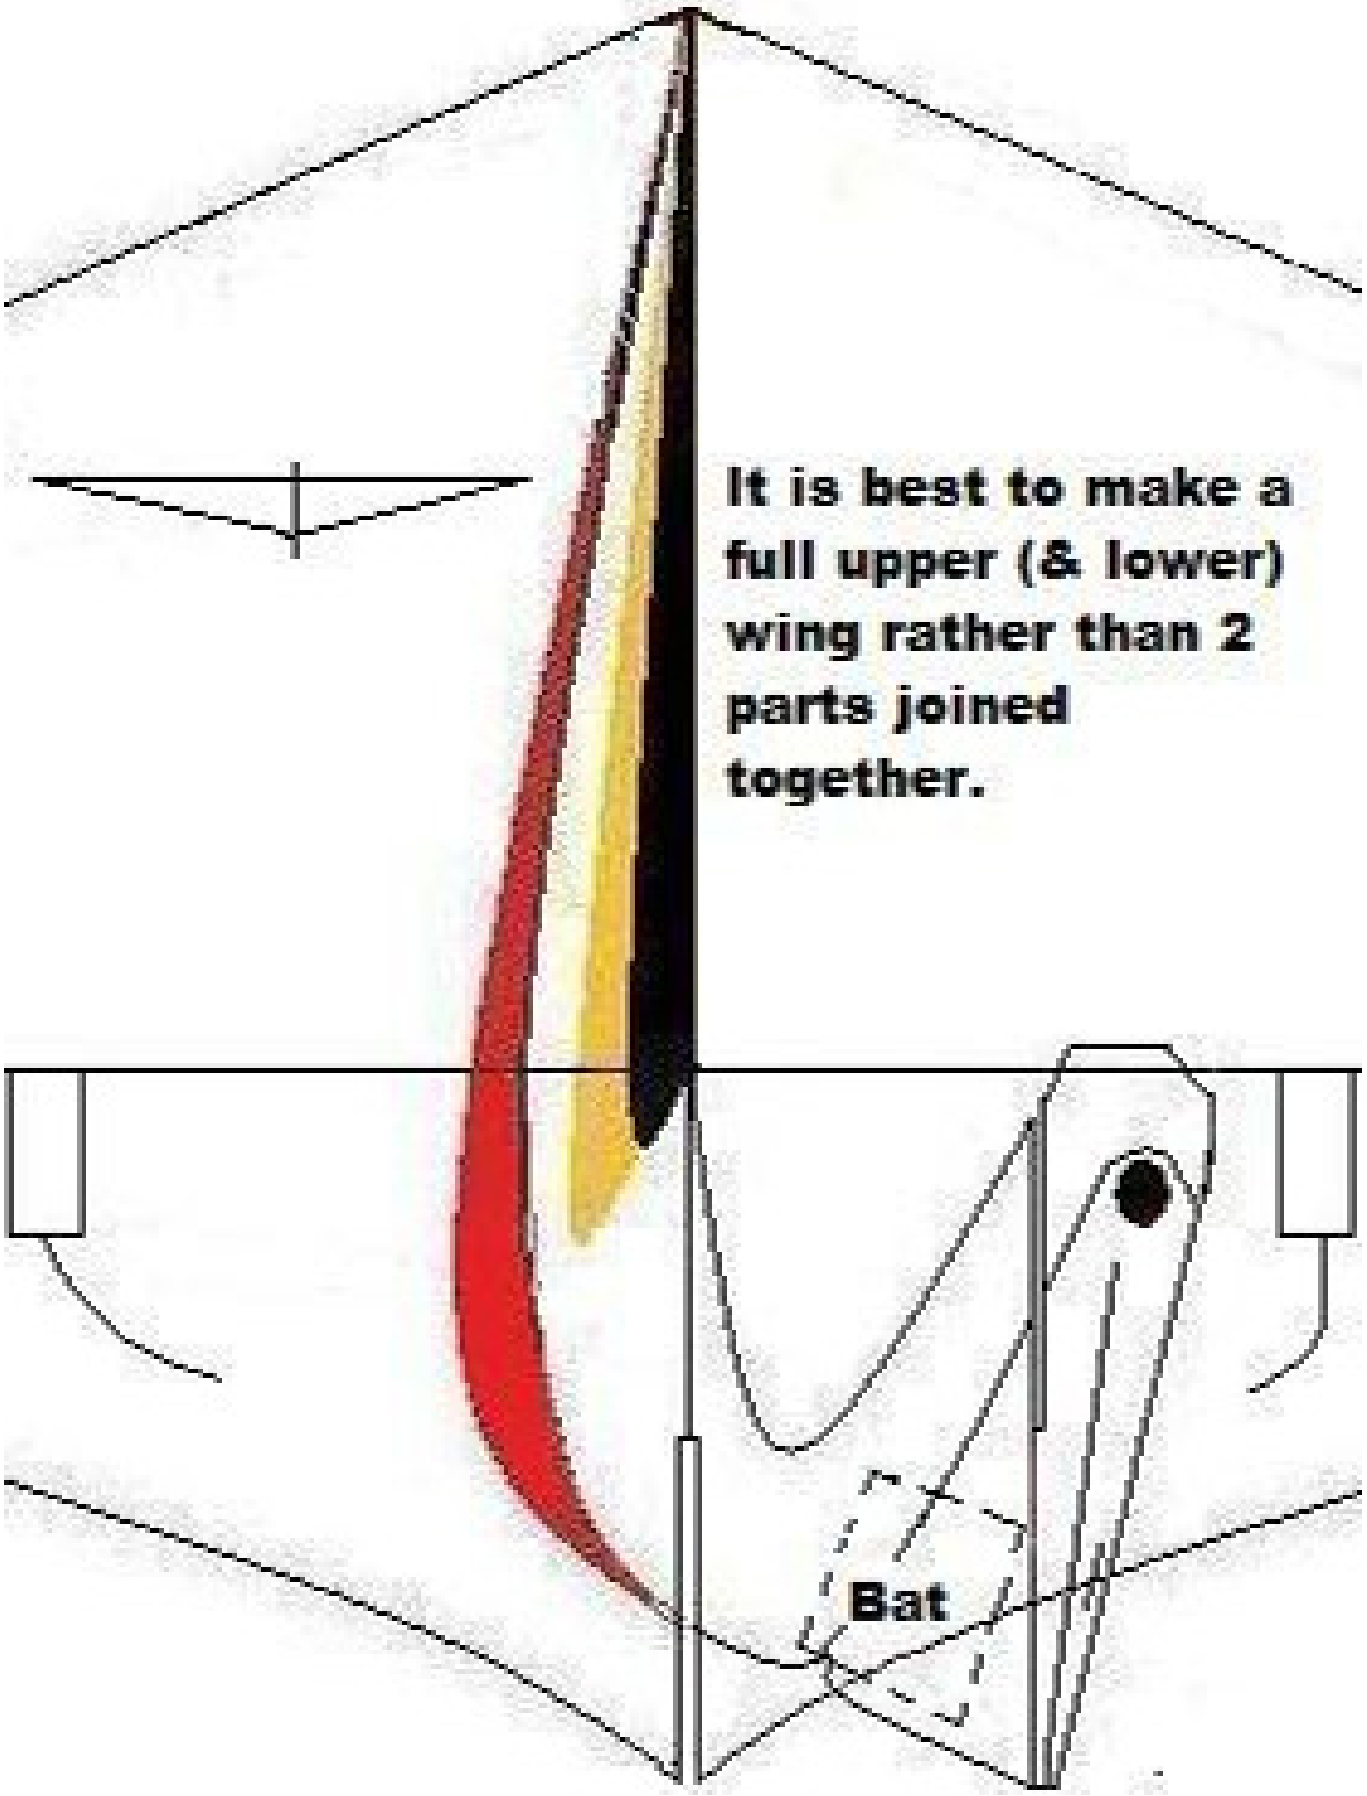
It is best to make a full upper (& lower) wing rather than 2 parts joined together.
Bat

