

NOTES:

1. 2MM DUPRON USED FOR CONSTRUCTION.
2. ORIGINAL 14 INCH 2MM SKETCH BY MIKE CROSS REDRAWN WITH PERMISSION.
3. LIPO AND Rx ARE MOUNTED ON OPPOSITE SIDES OF FUSELAGE.
4. USE RUBBER BAND TO HOLD BATTERY TO DETERMINE BEST FLIGHT LOCATION.
5. Rx ANTENNA ROUTES ALONG SIDE OF FUSELAGE.
6. MOTORS MOUNT ON BOTTOM OF WING USING AA MOTOR MOUNTS.
7. CENTER LINES SHOWN ON WINGS FOR REFERENCE ONLY.
8. CUSTOM PLOT SCALE 1 INCH = 25.4mm.


DRAWING REVISION	
A1	—

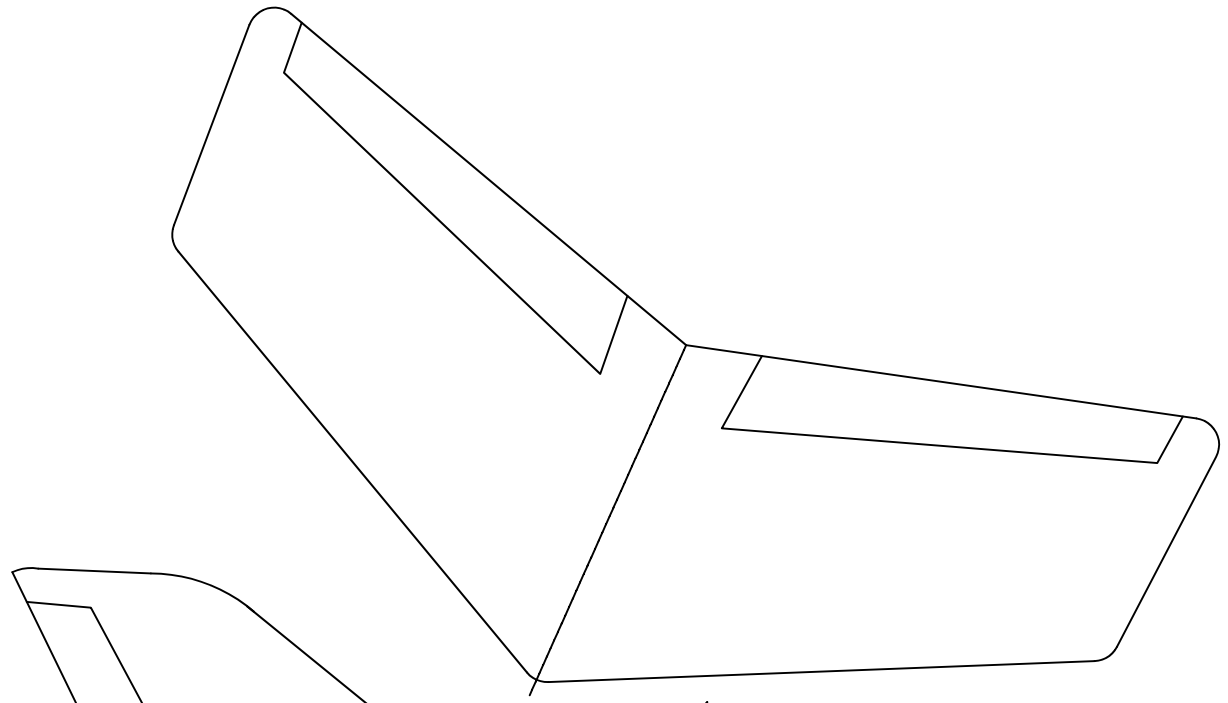

1x

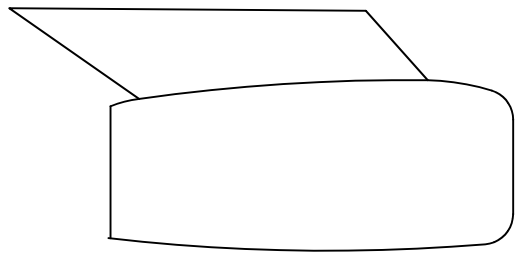

2x

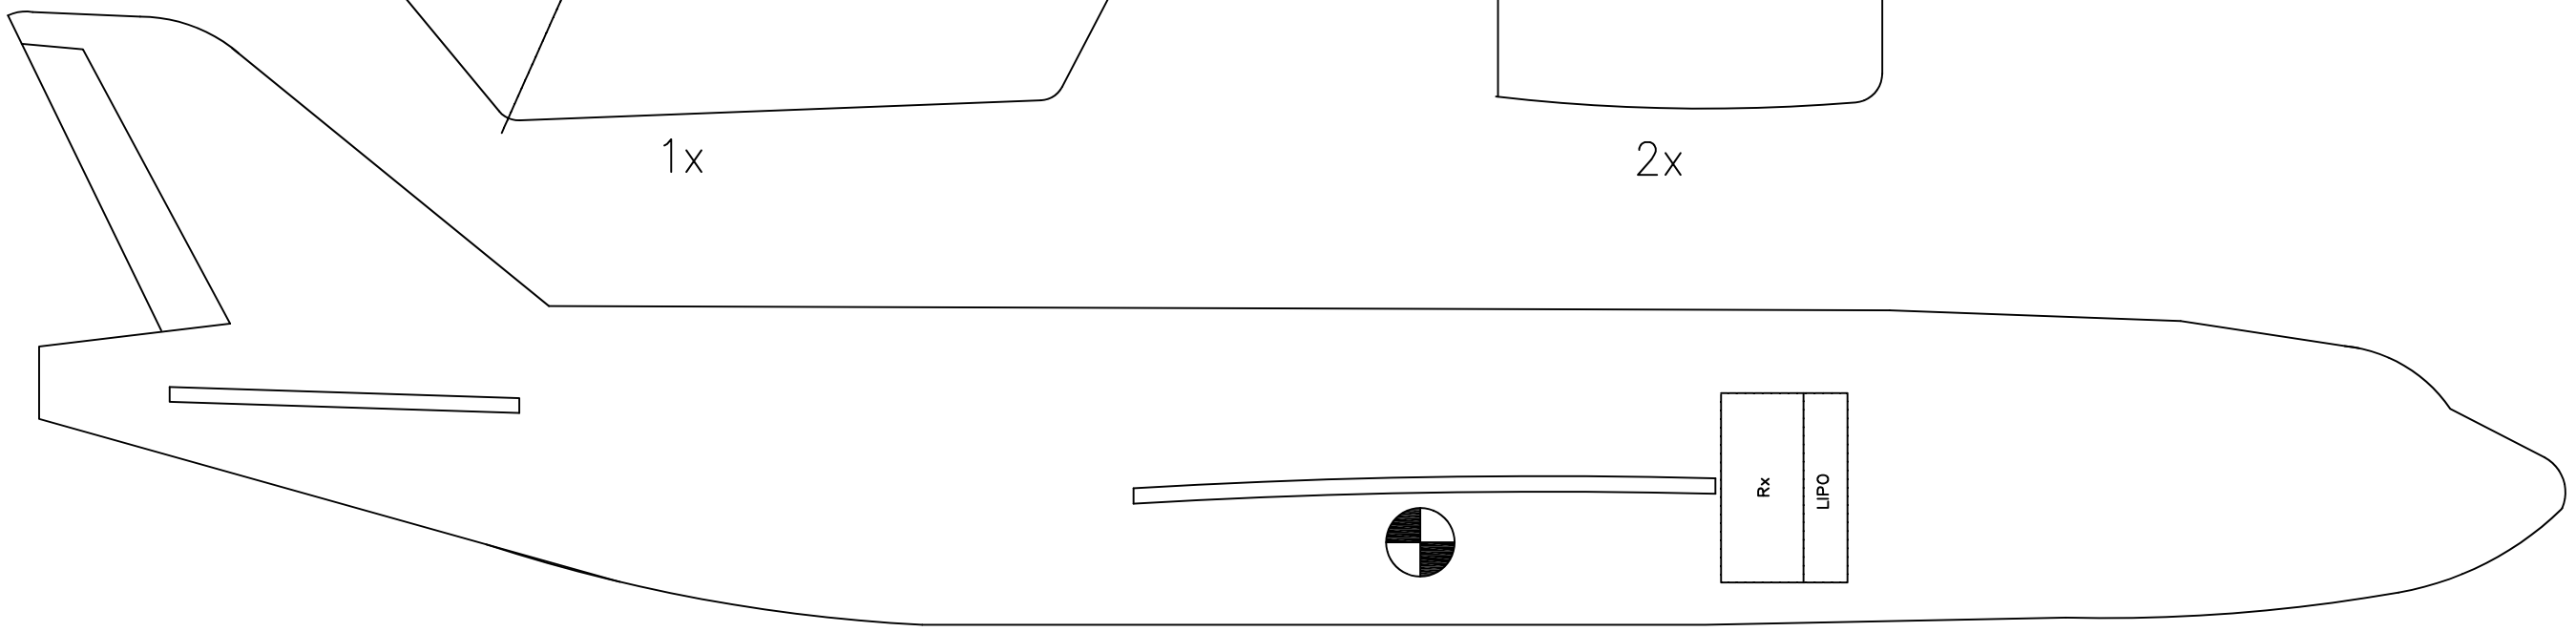

2x of Fuselage Required

Millimeters

0 10 20 30

SIZE B

2mm Jet Airliner	AA JET
	SHEET 1 OF 2
AEROACE JETS THREAD	*COMPUTER GENERATED DRAWING*